

Air Scrubber

BY ACTIVEPURE®



Model: A1013V



Duct Mounted Air & Surface Purification System

Read manual carefully for proper use and optimal operation.

General Information

Product Overview

Congratulations on your purchase of the Air Scrubber by ActivePure®! The unit is easily mounted into the supply side of air conditioning and heating system air ducts by an electrician or HVAC professional, and utilizes ActivePure Technology to reduce many common types of bacteria, viruses, and mold in indoor air and surfaces. Please read and follow all safety warnings and instructions outlined in this manual before installing or performing maintenance.

Contents

Product Overview	2
Specifications	2
Storage and Disposal	2
Important Safety Instructions	3
For Canadian Customers Only	4
Product Features	5
Installation Hardware (Supplied)	5
Recommended Installation Tools	5
Installation Requirements	6
Installing the Unit	7
Wiring the Unit	8
Maintenance/ActivePure Bulb Indicator	9
Replacing the ActivePure® Cell Assembly	9
Replacing the Ballast	11
Troubleshooting	12
Replacement Parts & Service	13
Warranty Information	14
FCC Declaration & Responsible Party	15

Fill In and Save

Record information regarding your new Air Scrubber by ActivePure here. Retain for future reference.

Model No. _____ Serial No. _____ Date of Purchase _____

Name: _____ Phone No. _____

Address: _____

Sales Representative: _____

Storage and Disposal

Do not dispose of this product as household waste. Electrical waste and electronic products should be appropriately recycled as required by practices established by your local authority.



If you have any questions regarding the use of this product, please contact your Sales Representative or Customer Service at 866.736.0503 or email aessupport@activepure.com.

Specifications

Air Scrubber by ActivePure® _____

- Sales Number: 9960052 (No Ozone)
- Model Number: A1013V (No Ozone)

Meets California ozone emissions limit. CARB Certified. Validated to UL 2998.

Technology _____

- ActivePure Technology - (1) 9" Cell Assembly

Electrical _____

- Input Voltage: 24 VAC; ~ 50/60 Hz; 1.0 Amp
- Power: 17 Watts

Mechanical _____

- Distribution via Air Handler
- Safety Switch installed

Safety _____

- Conforms to UL 1995

Weight & Dimensions _____

- 3 lbs (1.4 kg)
- 6.5" H x 6.5" W x 2.2" D (16.5 cm x 16.5 cm x 5.6 cm)

Cell Dimensions _____

- 2.3" H x 2.3" W x 9.0" D (5.7 cm x 5.7 cm x 22.9 cm)

Operating Temperature _____

- 34°F to 200°F (1.1 °C - 93.3 °C)

Coverage _____

- Up to 2,000 sq. ft. (185 m²) with uniform air diffusion; not to exceed 3,000 sq. ft. (279 m²).¹

Warranty _____

- Limited Lifetime Warranty on unit; 2 year warranty on ActivePure Cell Assembly

We reserve the right to change or modify any specification without notice.

- 1 Recommended ceiling height to not exceed 10 feet. Solutions should be customized based upon a variety of factors including HVAC system capabilities and settings, air flows taking into account walls, air pressure, and doors, ambient air temperatures and humidities, variable occupant density, known VOC concentrations, and other layers of protection.



Important Safety Instructions



WARNING

- UV Light in operation; disconnect unit from power supply before servicing; failure to follow warnings may result in severe eye damage and electrical shock
- To prevent damage to the unit, operating environment temperature must never exceed 200°F (93.3 °C)
- DO NOT use this unit with an extension cord
- To reduce the risk of electric shock, this equipment may have a grounding type plug that has a third (grounding) pin; this plug will only fit into a grounding type power outlet; if the plug does not fit into the outlet, contact qualified personnel to install the proper outlet; DO NOT alter the plug in any way
- This unit is equipped with a universal ballast that operates at a nominal voltage of 24 VAC
- To Reduce the Risk of Electric Shock – DO NOT use in wet or damp locations; this equipment emits UV-C radiation; DO NOT locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings
- DO NOT connect this unit to any voltage source above 32 volts; doing so will cause damage to the unit



CAUTION

- Wiring and installation of this unit must be done by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from the elements
- The Air Scrubber by ActivePure® requires power 24/7; DO NOT install where power to the unit will be cycled on and off



Location for Protective Earth Line.

Read this Installation Guide in its entirety before using your Air Scrubber by ActivePure.

Keep out of the reach of children.

- Live voltage may be present
- **Power Connection Requirements:** This device is designed to operate using a 24 VAC, 40Va transformer; transformers supplied with a straight cooling or HVAC system may be used to power the device but must be verified it's capable of handling the additional device load before installation; if the system transformer is not capable of handling the extra load, a separate 24 VAC, 40Va transformer MUST be used; do not connect the device to any power source with a voltage less than 22 VAC and a maximum of 32 VAC; doing so will cause damage to the device
- Disconnect power at the breaker or fuse panel before servicing unit; always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy
- If installed near a furnace or where emergency heat coils could raise the temperature inside the plenum, cycle the AC unit through the heating cycles assuring that the temperature never exceeds 200 °F (93.3 °C); the ActivePure® Cell Assembly must not exceed 200°F (93.3 °C)
- If the unit is hard wired, be sure the power to the unit is off; always follow OSHA electrical lockout safety requirements to prevent accidental release of energy during service or maintenance activities
- Never attempt to check operation of the ActivePure® Cell Assembly by direct observation; severe eye damage can result; check the indicator light on the front face of the unit, if light is On the Cell is operating

Save these instructions.

For Canadian Customers Only

Air Scrubber by ActivePure®

Sales No. : 9960052 (Ozone-Free)

This UV device helps reduce the spread of viruses in the air.

Keep out of the reach of children.

Please read the label and owner's manual before using: airscrubberbyactivepure.com/manuals

PRECAUTIONS:

WARNING: UV light source. Disconnect power before servicing. Unintended use of the device, or damage to the housing, may result in exposure to ultraviolet radiation. Ultraviolet radiation may cause eye and skin irritation. Avoid exposing eyes and skin to ultraviolet radiation.

FIRST AID INSTRUCTIONS: Please contact your healthcare provider in the event of injury caused by this device.

DIRECTIONS FOR USE:

Unit should be installed after the air handler in the HVAC system by a licensed HVAC contractor or electrician. Please see this manual for detailed instructions on using, handling, storing and disposing of the device, and procedures to mitigate any associated risks.

The use of this device is a supplement to and not a substitute for standard infection control practices; users must continue to follow all current infection control practices, including those related to the cleaning and disinfection of environmental surfaces.

FOR INQUIRIES CONTACT:

Aerus Canada, Inc.

Laird Business Park

3480 Laird Road, Units 2-5

Mississauga, Ontario, Canada, L5L 5Y4

W. Parrell, Manager

(905) 569-9399


wparrell@aerusonline.com

Aerus Canada, Inc. is affiliated with ActivePure Enterprise Solutions, LLC


ActivePure Enterprise Solutions, LLC, 1300 Valley Drive, Bristol, Virginia 24201

Product Features

It is important to be familiar with the parts of the Air Scrubber. If any parts are missing, please contact your Sales Representative or Customer Service at 866.736.0503 or email aessupport@activepure.com

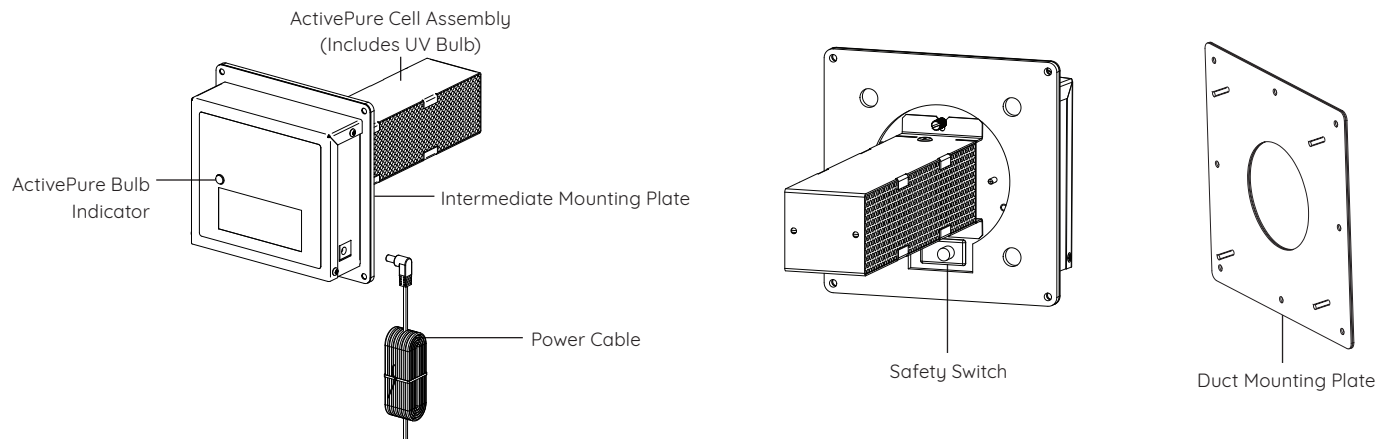

Installation Hardware (supplied)

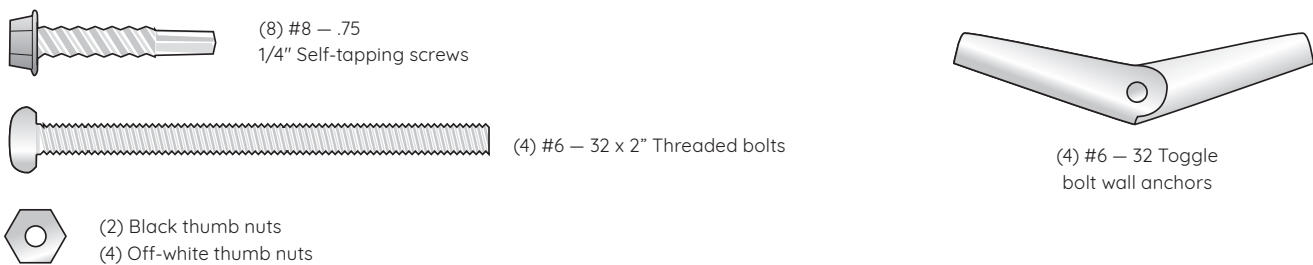


Recommended Installation Tools

CAUTION

When the unit is installed in a roof mounted HVAC system, the unit must be protected from elements.



YOU MAY ALSO NEED:

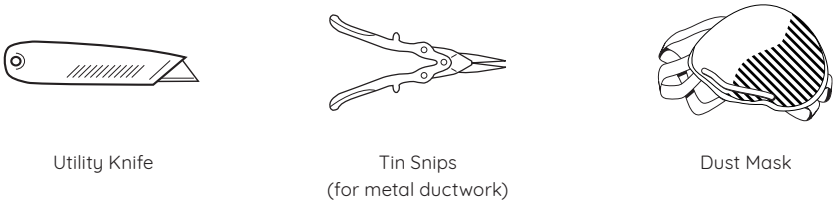

Installation Requirements



WARNING

- **Power Connection Requirements:** This device is designed to operate using a 24 VAC, 40Va transformer; transformers supplied with a straight cooling or HVAC system may be used to power the device but must be verified it's capable of handling the additional device load before installation; if the system transformer is not capable of handling the extra load, a separate 24 VAC, 40Va transformer **MUST** be used; **DO NOT** connect the device to any power source with a voltage less than 22 VAC and a maximum of 32 VAC; doing so will cause damage to the device
- If installed near a furnace or where emergency heat coils could raise the temperature inside the plenum, cycle the AC unit through the heating cycles assuring that the temperature never exceeds 200°F (93.3 °C); the ActivePure® Cell must not exceed 200°F (93.3 °C)




CAUTION

- This unit must be installed by a licensed HVAC contractor or electrician; failure to do so will void warranty of the product
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from the elements
- The Air Scrubber by ActivePure® requires power 24/7; **DO NOT** install where power to the unit will be cycled on and off

1. The Air Scrubber by ActivePure® unit should be installed after the air handler in the HVAC system.
2. The ductwork around the installation area should be clean and dry to ensure proper adhesion of the gasket materials and any tape used.
3. When installing near a furnace or heating coils, run the heating system through the heating cycles to ensure the temperature of the Air Scrubber by ActivePure unit does not exceed 200°F (93.3 °C).
4. An approximate 3.5" (8.89 cm) opening will need to be cut into the existing ductwork to install the unit properly.

NOTE: The Air Scrubber by ActivePure® requires power 24/7. **DO NOT** install where power to the unit will be cycled on and off.

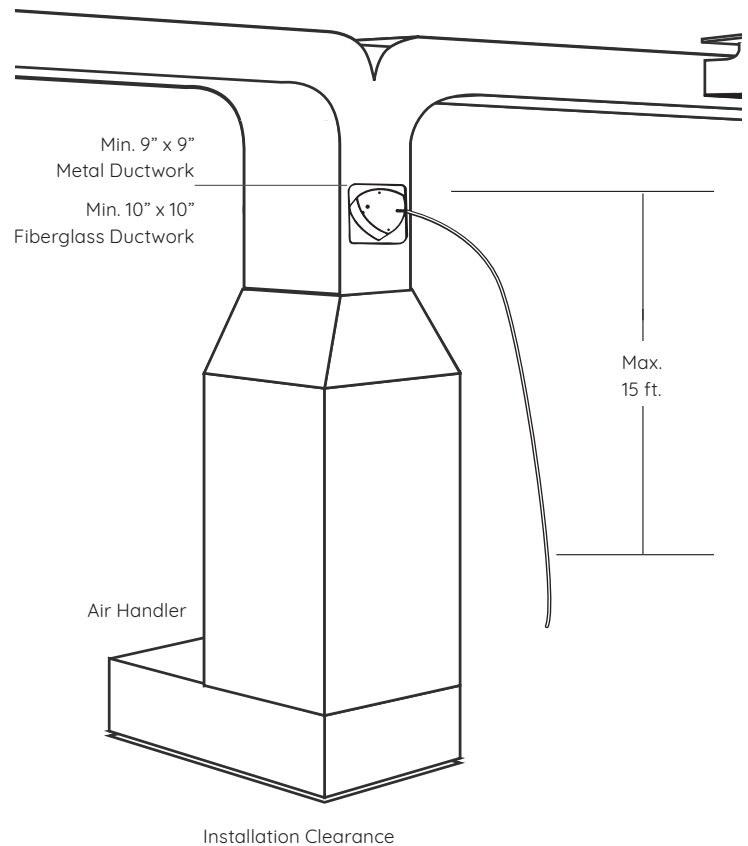

If you have any questions regarding installation requirements, please contact your Sales Representative or Customer Service at 866.736.0503 or email aessupport@activepure.com.

Installing the Unit




To Reduce the Risk of Electric Shock – DO NOT use in wet or damp locations. This equipment emits UV-C radiation. DO NOT locate equipment in any location allowing direct line-of-sight to vents, returns, or other duct openings. Disconnect from supply before servicing or replacing.




- Hard wiring unit into HVAC system must be done by a licensed HVAC installer or electrical contractor only
- When the unit is installed in a roof mounted HVAC system, the unit must be protected from elements
- The Air Scrubber by ActivePure® requires power 24/7; DO NOT install where power to the unit will be cycled on and off


Find the optimal position downstream from the air handler. Ensure location in duct has enough room for the mounting plate. It is recommended for maximum effectiveness that the unit be placed as close to the air handler as possible.

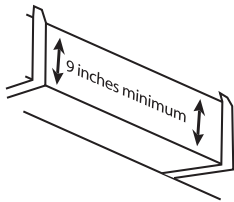


1. Locate suitable area of duct for installation.

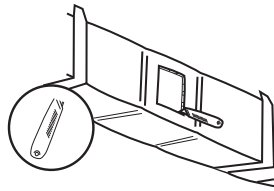

2. Cut away insulation to expose metal duct (if needed).

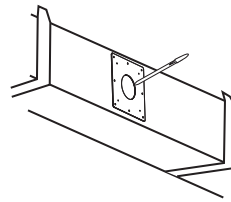


3. Mark location for 3.5" opening using the Duct Mounting Plate.

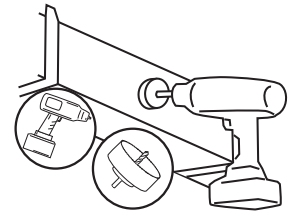


4. Cut hole in Duct Mounting Plate using 3.5" hole saw.


ALTERNATE CUTTING METHOD:

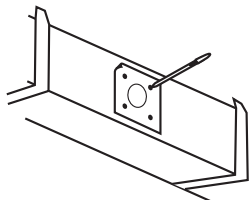

- a. Using the Duct Mounting Plate, mark four cutting method holes on duct.



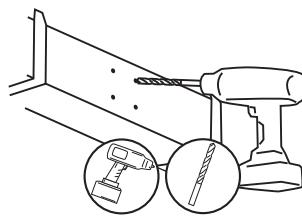


- b. Drill four holes where marked.

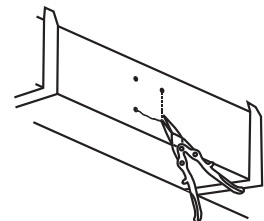


- c. Cut between holes using tin snips.

Installing the Unit (continued)

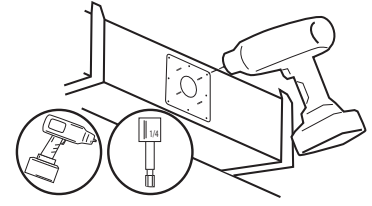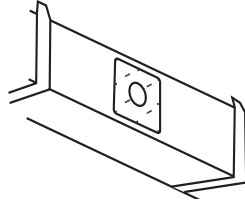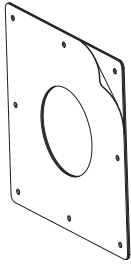


5. Remove backing from Duct Mounting Plate adhesive gasket.
6. Center openings and press Duct Mounting Plate onto duct. The adhesive gasket will hold the mounting plate in place.
7. Secure the Duct Mounting Plate using eight (8) #8 self-tapping screws.

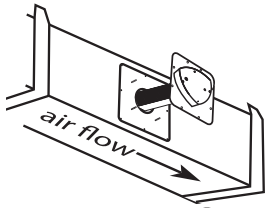

8. Insert unit into opening. Be sure the air will pass through the ActivePure® Cell Assembly honeycomb matrix.

Vertical Mount Option

If installing in a vertical up flow duct, it may be necessary to rotate the ActivePure Cell Assembly 90 (degrees) to keep the honeycomb in the airflow. Use (2) black thumb nuts to secure the ActivePure Cell Assembly onto the unit. (See step #8)

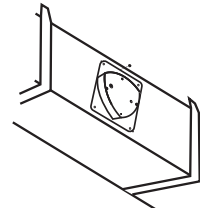

9. Secure the unit to the Duct Mounting Plate with four (4) off-white thumb nuts.

NOTE: Connect the unit to the load side of the transformer.

Wiring The Unit




- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy



- Hard wiring unit into HVAC system should be done by a licensed HVAC installer or qualified electrical contractor only
- The Air Scrubber by ActivePure requires power 24/7; DO NOT install where power to the unit will be cycled on and off

1. The Power Cable is separate from the unit. Attach the Power Cable to the transformer, then plug the Power Cable onto the front of the unit.
2. Check indicator light for proper operation.
3. Verify unit operation; Indicator light will be illuminated.

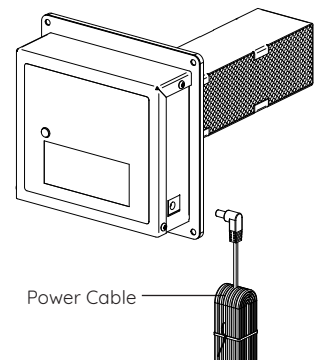


Maintenance / ActivePure® Bulb Indicator



For optimal performance and to maintain the Limited Lifetime Warranty, it is required to replace the ActivePure Cell Assembly once every two (2) years, even if the ActivePure Bulb appears to be operating normally.

Your Air Scrubber by ActivePure unit requires no periodic maintenance beyond normal replacement of the ActivePure Cell Assembly every two (2) years. The ActivePure Bulb has an effective life of 18,000 continuous hours.

The ActivePure Bulb Indicator on the face of the unit will glow when the ActivePure Bulb is in use. If the indicator does not glow and the unit has power, the ActivePure Cell Assembly should be replaced.

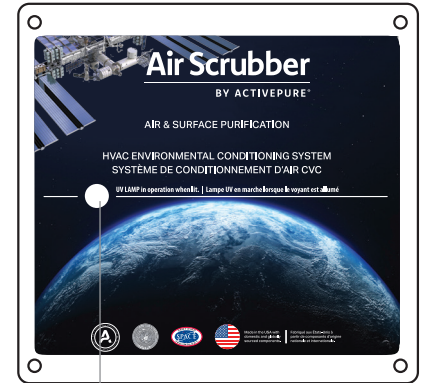

ActivePure Bulb Indicator




Replacing the ActivePure® Cell Assembly



- UV Light in operation; disconnect unit from Power Cable before servicing; failure to follow warnings may result in severe eye damage
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy




- For optimal performance and to maintain the Limited Lifetime year warranty, it is required to replace the ActivePure Cell Assembly once every two (2) years, even if the ActivePure Bulb appears to be operating normally.
- Use genuine AES replacement parts only; parts from anyone other than an authorized AES Representative may damage your unit and void your warranty.

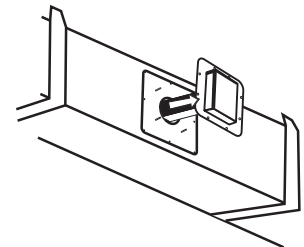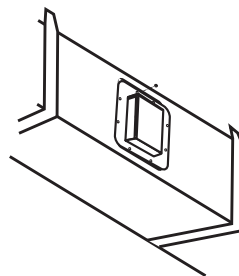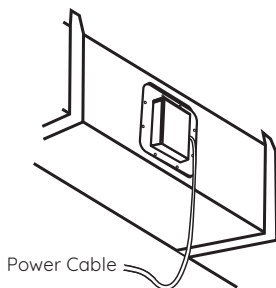


1. Disconnect (unplug) Power Cable from unit.
2. Remove the four (4) thumb nuts.
3. Remove the unit from the Duct Mounting Plate.


Replacing the ActivePure® Cell Assembly (continued)

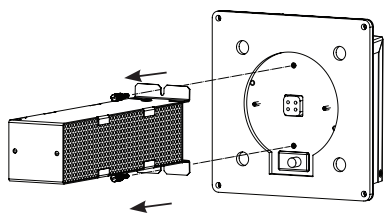


1. Remove the two (2) thumb screws holding the ActivePure Cell Assembly.

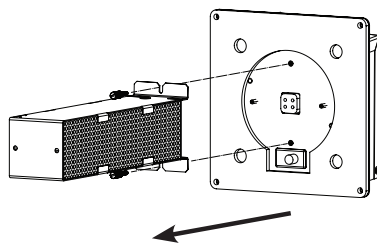


2. Remove the used ActivePure Cell Assembly from the base of the unit and dispose of the Cell Assembly properly.

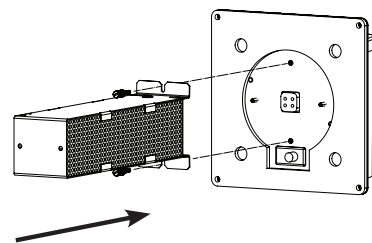


3. Plug the new ActivePure Cell Assembly into the base of the unit. Be sure Air Flow is passing through the Honeycomb Cell.

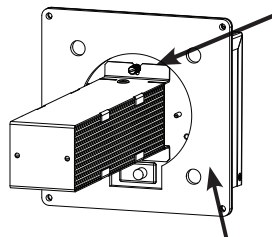


4. Secure with two (2) thumb screws.

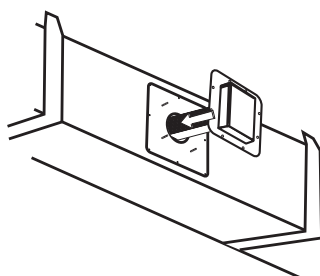

5. Insert the Air Scrubber by ActivePure® into the Duct Mounting Plate.

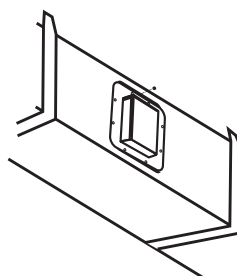

6. Secure unit with four (4) thumb nuts.

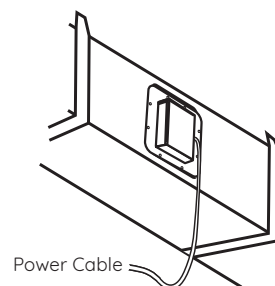

7. Reconnect Power Cable.



Visit lamprecycle.org for proper bulb disposal regulations

Replacing the Ballast




WARNING

- UV Light in operation; disconnect unit from Power Cable before servicing; failure to follow warnings may result in severe eye damage
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout safety requirements to prevent accidental exposure to electrical energy





CAUTION

Use genuine AES replacement parts only; Parts from anyone other than an authorized AES Representative may damage your unit and void your warranty.


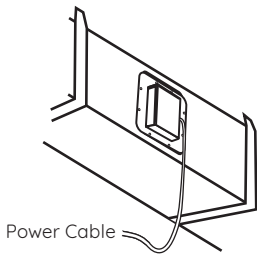


Power Cable

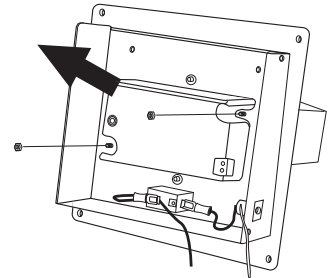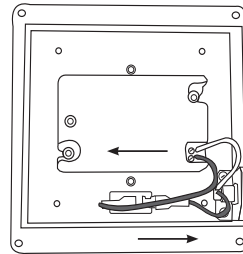

1. Disconnect (unplug) Power Cable from unit.
2. Open the Ballast housing by removing the four (4) screws then removing the Cover.
3. Disconnect all Ballast wiring by pressing down on connector tabs and pulling wire straight out.
4. Remove the two (2) nuts securing Ballast to the case. Remove the Ballast.

NOTE: The screws are under the face plate label indicated by the small "X".

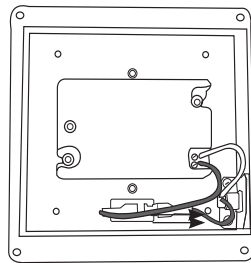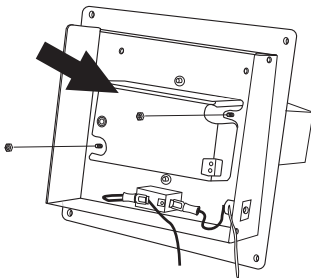

ActivePure Bulb Indicator



5. Place new Ballast into the original location and secure using the two (2) nuts removed in step 4.
6. To reconnect wiring, insert wire into wire pocket in Ballast until bottomed. Gently pull wire to ensure it is properly connected.
7. Replace Cover and secure with the original four (4) screws.
8. Re-install unit if removed from duct. Reconnect Power Cable, turn breaker or fuse power back on and check for proper operation.

NOTE: ActivePure Bulb Indicator should be lit when in operation.

Troubleshooting



- UV Light in operation; disconnect unit from Power Cable before servicing; failure to follow warnings may result in severe eye damage
- Live voltage may be present
- Disconnect power at the breaker or fuse panel before servicing unit
- Always follow OSHA electrical lockout procedures to prevent accidental exposure to electrical energy





This unit must be installed and serviced by a licensed HVAC contractor or electrician. Failure to do so will void the warranty of the product.

TOOLS REQUIRED:

- 1/4 Nut Driver
- Phillips Head Screwdriver
- Multimeter
- Small Flat Head Screwdriver
- Flashlight

1. Check the incoming voltage by unplugging the Power Cable from the side of the Air Scrubber by ActivePure® and placing one probe on the outside of the plug and the other on the inside of the plug. Voltage measurement should read 22-32 VAC. If no voltage is measured, first verify current is getting to the transformer. If it is, then replace the transformer supplying power to the Air Scrubber by ActivePure.
2. Leave unit attached to ducting. Remove four (4) Phillips head screws from the cover of the unit. Remove the Cover. Unplug the black and white wires from the Ballast. Check incoming voltage by placing Multimeter probes on the two exposed wires. Voltage measurement should be between 22-32 VAC. If there is no voltage reading, power is not supplied to the unit. Check power source and verify the Air Scrubber by ActivePure Safety Switch is fully depressed. Safety switch plunger is located underneath the unit and is depressed when unit is secured to mounting plate.
3. Re-plug the black and white wires to the Ballast.
4. Remove unit from the duct by taking off the four (4) 11/32 thumb nuts that secure the unit to the mounting plate.
5. Remove the two (2) Phillips head screws that hold the ActivePure Cell Assembly in place. Remove the ActivePure Bulb from the 4-pin connector by placing a small flat head screwdriver between the 4-pin connector and the ActivePure Bulb base. Gently pry and lift up on the Cell Assembly until the ActivePure Bulb is unseated from the 4-pin connector, remove the ActivePure Cell Assembly.
6. Check the continuity of the ActivePure Bulb filaments with a Multimeter by placing the Multimeter probes on the ActivePure Bulb pins that are closest to each other. The Multimeter should beep if the filaments are not broken. Resistance can also be checked if continuity is not available on the Multimeter. Resistance should be between 3 – 5 ohms. If continuity or resistance check is bad, replace the ActivePure® Cell Assembly.
7. If continuity or resistance check is good, replace the Ballast. To replace the Ballast follow these steps.

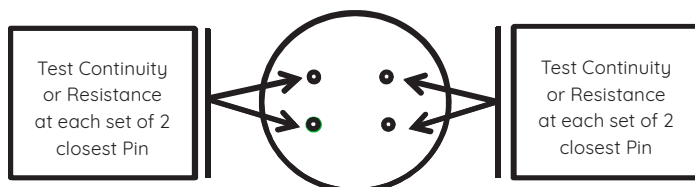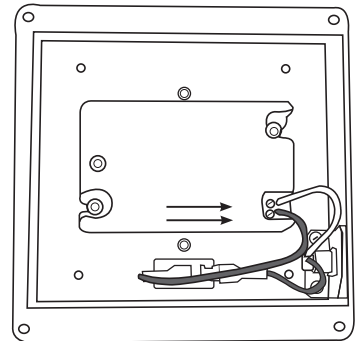


For questions on maintenance procedures, please contact your Sales Representative or Customer Service at 866.736.0503 or email aessupport@activepure.com.

Replacement Parts & Service



Use genuine AES replacement parts only; Parts from anyone other than an authorized AES Representative may damage your unit and void your warranty.

REPLACEMENT PARTS	PART NUMBER
ActivePure Cell Assembly - (1) 9" Cell Assembly (No Ozone)	US71088
Ballast	9950102
Power Cable	9950103

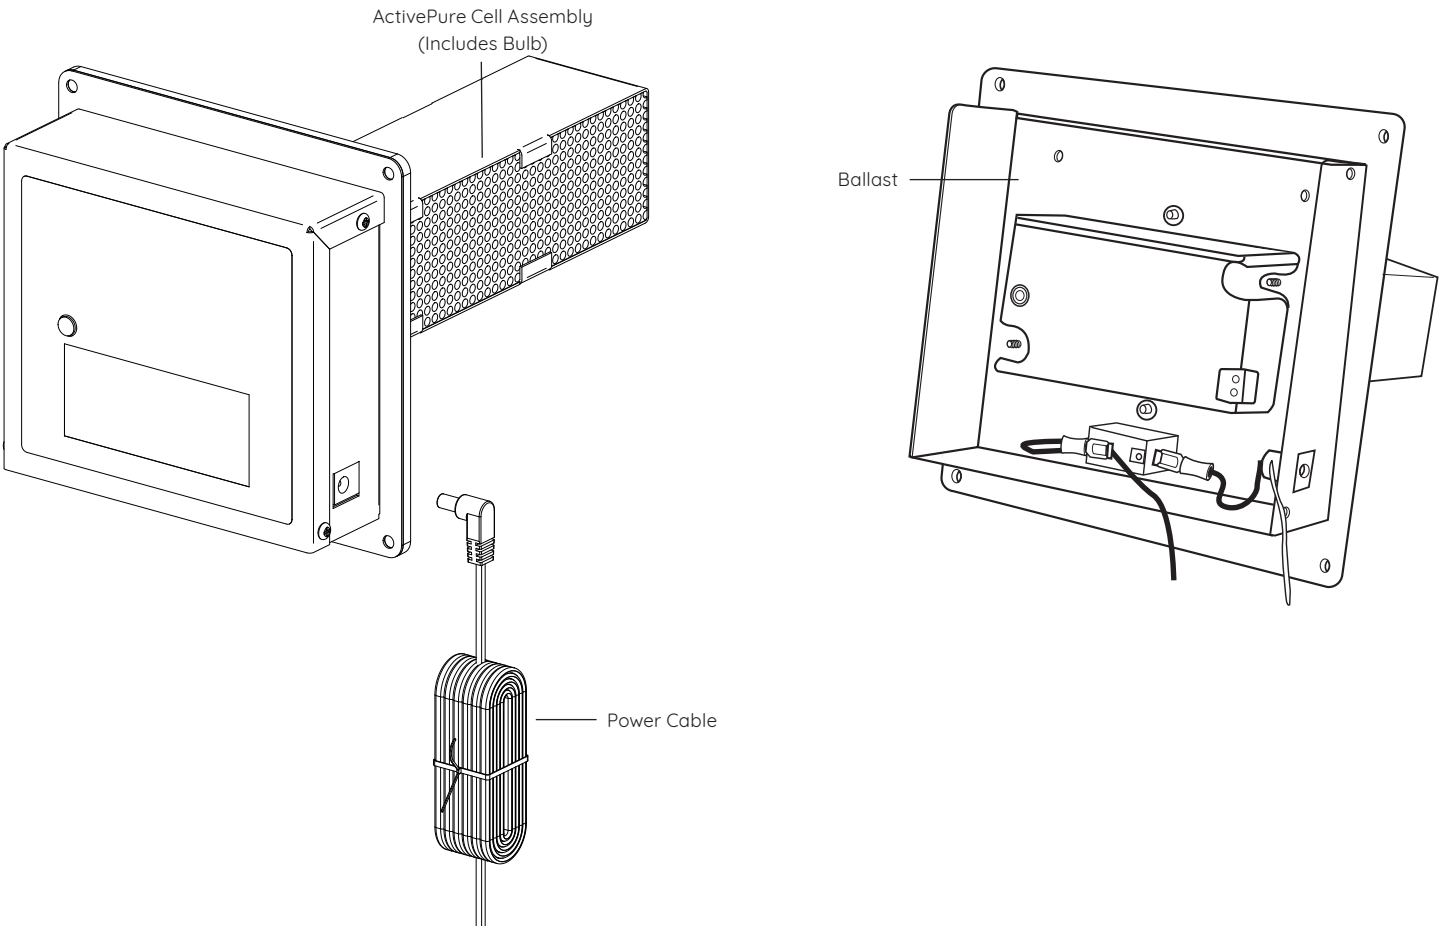

To order replacement parts, please contact your Sales Representative or Customer Service at 866.736.0503 or email aessupport@activepure.com.

Warranty Information

Limited Lifetime Warranty

Lifetime warranty is dependent on registering your Air Scrubber by ActivePure unit. To register your Air Scrubber by ActivePure®, please visit airscrubber.com/warranty or contact Customer Service by email at aessupport@activepure.com or by phone at 866.763.0503. Products that are not registered at the time of installation will only be covered by the standard five (5) year limited warranty.

Customer should not repackage and ship the Air Scrubber by ActivePure® unit due to possibility of irreparable damage. For questions on warranty service, please contact Customer Service at 866.736.0503 or email aessupport@activepure.com.

WHAT IS COVERED BY THIS WARRANTY

We warrant the Air Scrubber by ActivePure to the customer, subject to the conditions below, against defects in workmanship or material, provided that the products are returned to an authorized AES location within the following time periods:

- Air Scrubber by ActivePure (excluding the ActivePure® Cell Assembly)
 - Five (5) years for products that are not registered
 - Lifetime for products that are registered and have received Cell Replacement Service on the two (2) year schedule laid out in this owner's manual
- ActivePure Cell Assembly within two (2) years of date of purchase if the Air Scrubber by ActivePure is connected to a power source where the ActivePure Cell Assembly is "ON" 100% of the time. If the Air Scrubber by ActivePure is connected to the fan circuit where the ActivePure Cell Assembly cycles "ON and OFF" with the system fan, the ActivePure Cell Assembly is only covered by a ninety (90) day warranty from date of purchase.

MAINTENANCE REQUIREMENTS

This warranty is expressly conditioned upon proper installation, operation, cleaning and maintenance, all in accordance with the Owner's Manual. Failure to meet any of these requirements will void this warranty. Servicing of your Air Scrubber by ActivePure by parties other than an authorized AES Representative and/or using parts other than genuine parts will also void this warranty.

This warranty is contingent upon:

- Registration of the product through the approved methods listed above
- Replacing the ActivePure Cell Assembly once every (2) years with a genuine AES part (proof of change may be required).

HOW TO OBTAIN WARRANTY SERVICE

Customer must register their Air Scrubber by ActivePure at airscrubber.com/warranty or contact Customer Service at aessupport@activepure.com and provide proof of purchase (including purchase date) within the above time periods. We will repair or replace and return the product, without charge and within a reasonable period of time, subject to the conditions herein, if its examination shall disclose any part to be defective in workmanship or material. If we, in our discretion, are unable to repair the product after a reasonable number of attempts, we will provide either a refund of the purchase price or a replacement unit, at the company's option. We reserve the right to inspect and/or require confirmation of installation method.

WHAT IS NOT COVERED BY THIS WARRANTY

Ordinary wear and tear shall not be considered a defect in workmanship or material. These warranties do not apply for loss or damage caused by accident, fire, abuse, misuse, improper installation, modification, misapplication, failure to maintain the product as provided herein, or by any repairs other than those provided by an authorized AES location. This warranty is non-transferable.

UNAUTHORIZED CHANNELS AND MISSING SERIAL NUMBERS

If a valid serial number is missing from the product, the warranty will be voided. Air Scrubber by ActivePure products are for sale through authorized AES Sales Representatives only. Warranties are voided if a product is purchased through unauthorized channels; this includes websites that are not authorized to sell our products OR use AES trademarked names, images and logos as well as Internet

auction sites (e.g. eBay and Craigslist). The only approved Internet presence for AES products is airscrubber.com. To confirm warranty coverage prior to purchasing a product, please contact Customer Service at 866.736.0503 or email aessupport@activepure.com with the serial number located on the unit.

EXCLUSION OF OTHER WARRANTIES AND CONDITIONS

EXCEPT AS PROVIDED HEREIN, AND TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE MAKE NO REPRESENTATION OR WARRANTY OF ANY KIND. ALL OTHER WARRANTIES OF ANY KIND, EXPRESS OR IMPLIED, ARE HEREBY EXPRESSLY DISCLAIMED, INCLUDING ANY IMPLIED WARRANTY OF MERCHANTABILITY OR FITNESS FOR A PARTICULAR PURPOSE.

LIMITATION OF LIABILITY FOR SPECIAL, INCIDENTAL, OR CONSEQUENTIAL DAMAGES

TO THE EXTENT CONSISTENT WITH APPLICABLE LAWS, WE SHALL NOT IN ANY CASE BE LIABLE FOR SPECIAL, INCIDENTAL OR CONSEQUENTIAL DAMAGES ARISING FROM BREACH OF EXPRESSED OR IMPLIED WARRANTIES, CONDITIONS, GUARANTEES OR REPRESENTATIONS, BREACH OF CONTRACT, NEGLIGENCE OR ANY OTHER LEGAL THEORY. Such excluded damages include, but are not limited to, loss of profits or revenue, and loss of the use of the products, and any loss caused by leaks or other water damage.

FOR U.S. APPLICATION ONLY

This warranty gives you specific legal rights, and you may also have other rights which vary from state to state. Some states do not allow limitations on warranties, or on remedies for breach. In such states, the above limitations may not apply to you.

FOR CANADIAN APPLICATION ONLY

Exclusion of Subsequent Owners: Except as otherwise required by applicable legislation, this warranty is not transferable. This warranty gives you specific legal rights and you may also have other rights which vary from province to province. Some provinces and territories do not allow limitations on warranties, or on remedies for breach. In such provinces or territories, the above limitations may not apply to you.

If any provision of this warranty or part thereof is held by a court of competent jurisdiction to be invalid, illegal, or unenforceable, the validity, legality and enforceability of the remaining provisions or parts thereof will not in any way be affected or impaired within the jurisdiction of that court. This entire warranty shall continue to be valid, legal and enforceable in any jurisdiction where a similar determination has not been made.

This warranty is provided by:

ActivePure Enterprise Solutions, LLC
1300 Valley Drive
Bristol, VA 24201

SERVICE

Every effort is made to ensure customers receive an up-to-date owner's manual on the use of our products; however, from time to time, modifications to our products may without notice make the information contained herein subject to alteration. For the latest information, please view the owner's manual at airscrubber.com/manuals.

FCC Declaration & Responsible Party

This equipment has been tested and found to comply with a Class B digital device, pursuant of Part 15 of the FCC Rules These limits are designed to provide reasonable protection against harmful interference in a residential installation. This equipment generates, uses, and can radiate radio frequency energy, and if not installed and used in accordance with the instructions, may cause harmful interference to radio communications. However, there is no guarantee that interference will not occur in a particular installation. If this equipment does cause harmful interference to radio or television, which can be determined by turning the equipment off and on, the user is encouraged to try to correct the interference by one or more of the following measures:

- Reorient or relocate the receiving antenna.
- Increase the separation between the equipment and receiver.
- Connect the equipment into an outlet on a circuit different from that to which the receiver is connected.
- Consult the Independent HVAC Contractor or an experienced radio/TV technician for help.

FCC DECLARATION OF CONFORMITY

Name: Air Scrubber by ActivePure

Model: A1013V (Ozone-Free)

Produced for: ActivePure Manufacturing, LLC

This device complies with Part 15 of the FCC Rules.

RESPONSIBLE PARTY

ActivePure Enterprise Solutions, LLC

1300 Valley Drive

Bristol, VA 24201

Ph: 866.736.0503

Signature: 

Printed Name: Andrew Eide

Title: Vice President of Product Development
and Manufacturing

Date: 07/08/2025

For information regarding the use of this product please call Customer Service at 866.736.0503 via email at aessupport@activepure.com.

AIRSCRUBBER.COM

© 2025 ActivePure Manufacturing, LLC. All Rights Reserved

